

TO OPERATE:

STEP 1

PUSH CHILD-RESISTANT
LATCH IN AND
THEN UP:



STEP 2

PUSH IGNITION
LEVER DOWN
TO LIGHT.



TO ADJUST FLAME: While lit, move lever toward "v" for higher flame,
toward "x" for lower flame.

**FOR MAXIMUM SAFETY, KEEP CHILD-RESISTANT LATCH
DOWN WHEN NOT IN USE**

WARNING: READ CAREFULLY

Failure to follow instructions may result in burn injury. **EXTREMELY FLAMMABLE.** Do not use near fire or flame.
CAUTION: Do not puncture, incinerate or expose to temperatures above 120°F. Do not attempt to refill.
KEEP OUT OF REACH OF CHILDREN. As with all lighters, hold away from face when lighting.

CAUTION: Be sure flame is extinguished after use.

KEEP OUT OF REACH OF CHILDREN

No lighter is "childproof." The child-resistant features of this lighter are no substitute for adult supervision.

GUARANTEE

Should your Benson® lighter prove defective under normal use, return it for
replacement or refund. For an approved lighter mail tag and return to Benson Tools,
P.O. Box 5005, Fontana, CA 92334-5005. (800) 241-8802. Ext. 608.

BENSON & HEDGES

85652-C1